



After installing a light bulb; squeeze the spring, place it towards opening of the glass cap and release the spring GENTLY-SLOWLY not to damage glass cap.

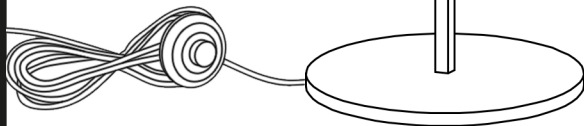

After plugging floor lamp, you can use it with on/off switch.

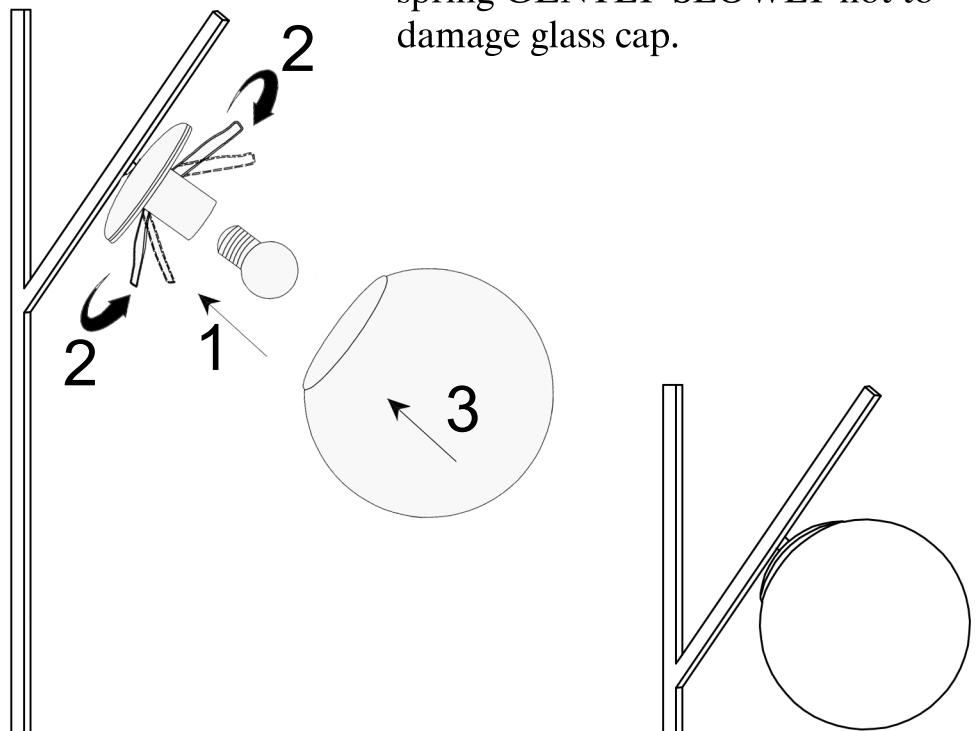