


VENTURE DESIGN

HOME & INTERIOR

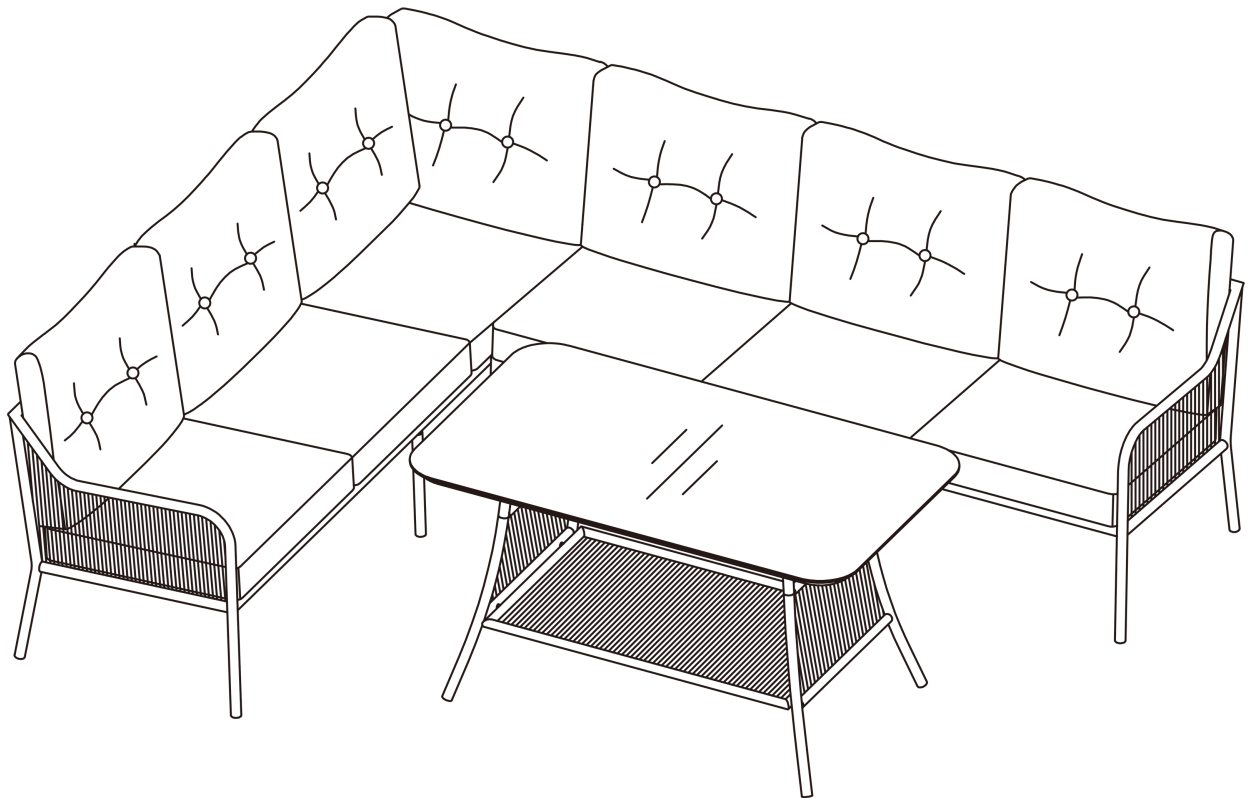

1005-195


Berlin corner set With



Rope Black / Black / Black / Grey Cushion

Monteringsanvisning - Assemblyinstruction - Einbauzeichnung



1 SET=1 PC THREE SEATER+1 PC CORNER SOFA+1 PC TABLE

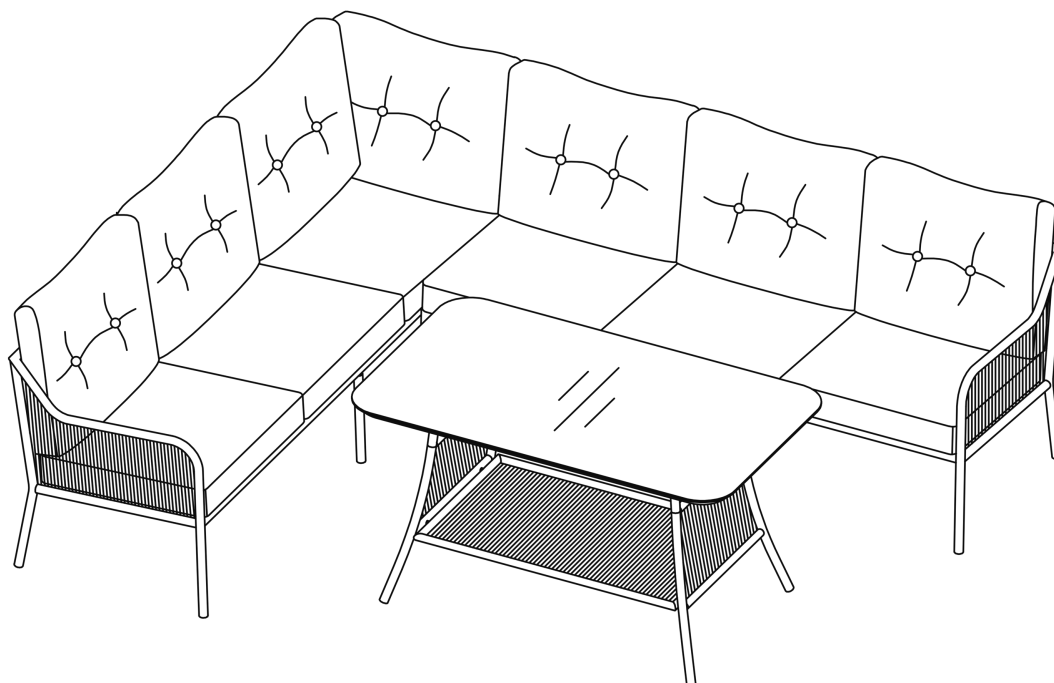



Art nr:	No:	Parts	Qty	Art nr:	No:	Parts	Qty
1999-5623	A		1	1999-5624	D	 M6x15mm	16
	B		2		E	 M6x40mm	4
	C		1		F		20
	H		1		G		1

Please kindly note that after assembled, Then tighten all the screws! If you feel it's hard to screw in. Please take back a little, Then try again!


Tänk på att efter montering, dra sedan åt alla skruvarna! Om du känner att det är svårt att skruva fast. Ta tillbaka lite, försök igen!

Bitte beachten Sie, dass nach dem Zusammenbau alle Schrauben festgezogen werden müssen! Wenn Sie das Gefühl haben, dass es schwierig ist, sich einzuschrauben. Bitte nehmen Sie ein wenig zurück, dann versuchen Sie es erneut!


VENTURE DESIGN
HOME & INTERIOR

Art nr:	No:	Parts	Qty	Art nr:	No:	Parts	Qty
	A		1	1999-5624	D	 M6x15mm	16
	B		2		E	 M6x40mm	4
	C		1		F		20
1999-5623	H		1		G		1


Step1

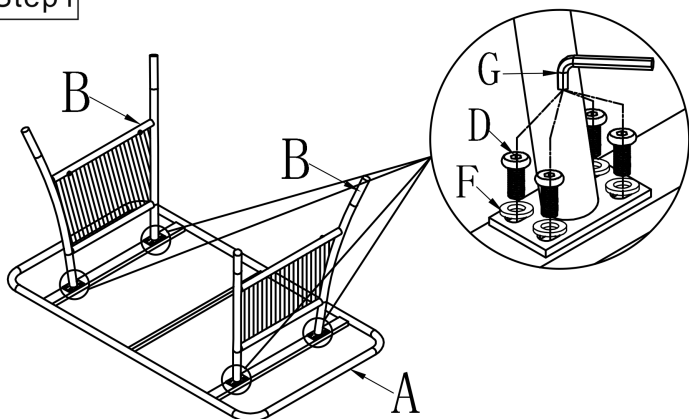


Step2

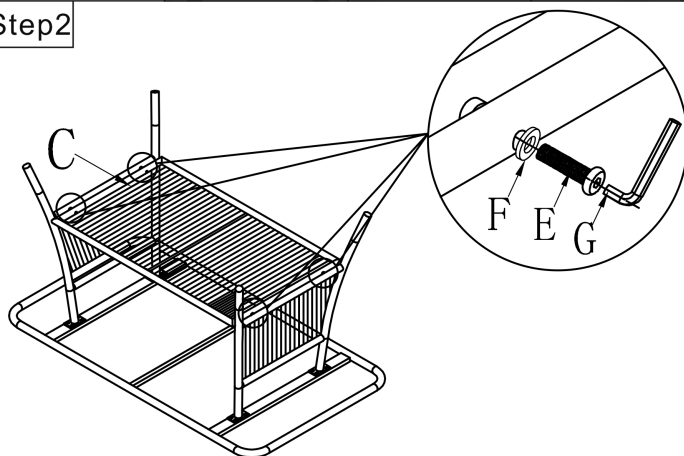

Step3

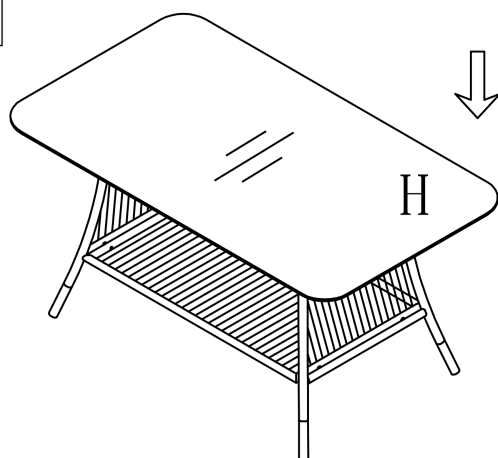

Step4

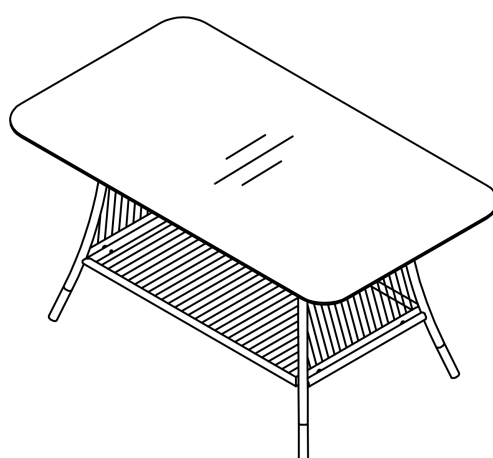

Please kindly note that after assembled, Then tighten all the screws!

Tänk på att efter montering, dra sedan åt alla skruvarna!

Bitte beachten Sie, dass nach dem Zusammenbau alle Schrauben festgezogen werden müssen!

VENTURE DESIGN
HOME & INTERIOR